

ENERGY TECHNOLOGIES
BUILD LIFE BETTER

RESIDENTIAL
BATTERY



MANA 10.24-D

Product Description

Contact Details

Shenzhen EEnovance Energy Technology CO., LTD
Room 401, Building 2, Yufengda Industrial Park, No. 1008
Guangqiao Avenue, Yulv Community, Yutang Streets,
Guangming District, SHENZHEN.PRC.
Telephone: +86 755 8656 6313
Email: info@eenovance.com

Copyright@2024 Shenzhen EEnovance Energy Technology Co., Ltd. All rights reserved.
EN V1.6 202512

EENOVANCE

eenovance.com

CONTENTS

1 Technical Data	1-2
2 Product Overview	3
2.1 Brief Introduction	3
2.2 Interface Introduction	4
2.2.1 Switch ON / OFF	4
2.2.2 CAN / RS485 Port	5
2.2.3 RS232 Port	5
2.2.4 Function Description Of The LCD Display	6
2.2.5 Function Description Of The ON/OFF Button	6
3 Installation Guide	7
3.1 Checking Before Installation	7
3.1.1 Checking Outer Packing Materials	7
3.1.2 Checking Deliverables	7
3.2 Tools	9
3.3 Installation Requirements	9
3.3.1 Installation Environment Requirements	9
3.3.2 Installation Carrier Requirements	9
3.4 Installation Instructions	10
3.4.1 Dimensions	10
3.4.2 Installation Procedure	11-14
4 Maintenance	15
4.1 Recharge Requirements During Normal Storage	15
4.2 Recharge Requirements When Over Discharged	15
5 Disposal Of The Battery System	16

01 TECHNICAL DATA

NOTE

Operating current derating according to cell voltage and battery temperature.

Safe and Reliable

Meet diverse home energy needs with LFP batteries, ensuring safety and reliability.

Flexible and Expandable

Easily connect up to 15 units in parallel, don't worry about future power increases in your home.

Hassle-Free Setup

Easily choose between floor or wall installation, and effortless maintenance.

Smart Home

Use your smartphone to control your home energy freely.



Datasheet

Model	MANA 10.24-D
-------	--------------

Performance

Cell Technology	LFP (LiFePO ₄), Lithium Iron Phosphate
Nominal Voltage	51.2 Vdc
Nominal Capacity	200 Ah
Battery Energy ^[1]	10240 Wh
Operating Voltage	44.8 - 56.16 Vdc
Max. Charge And Discharge Current ^[2]	200 A

Communication

Display	LCD display
Communication	CAN / RS485 / RS232 / Wi-Fi

General Specification

Dimension (W×D×H)	550×160×836 mm 21.7×6.3×32.9 inch
Weight (kg)	87.45 Kg (192.7 lbs)
Installation	Floor stand
Operating Temperature ^[3]	Charge: 0 to 50°C (32 to 122°F) Discharge: -15 to 50°C (5 to 122°F)
Operating / Storage / Humidity	≤ 95%RH (No condensation)
Ingress Protection Rating	IP 20
Scalability	Max 15 batteries in parallel

Standard Compliance

Compliance	UN38.3 / IEC62619 / IEC61000 (More available upon request)
------------	--

Ordering and Deliverable Part

Part	MANA 10.24-D Battery MANA 10.24-D Parallel cable MANA 10.24-D to PCS cable
------	--


[1] Test conditions: 100% depth of discharge (DOD), 0.2C rate charge & discharge at 25°C.

[2] There is 0.5C or 1C configurations optional in factory default.

[3] Charge/discharge derating occurs when the temperature is below 0°C or above 45°C.

02 PRODUCT OVERVIEW

2.1 Brief Introduction

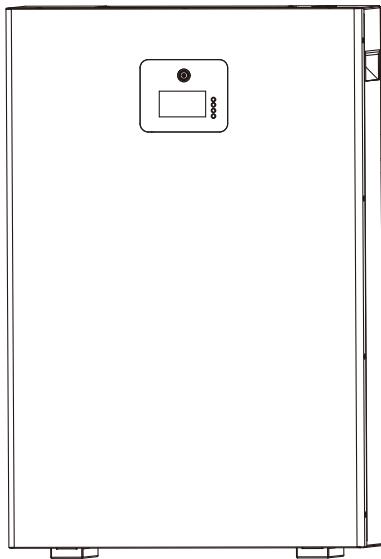


PRODUCT OVERVIEW

MANA 10.24-D is a lithium battery with an operating voltage range between 44.8~56.16V. It is designed for residential energy storage applications and works together with a 48v battery hybrid inverter. MANA 10.24-D is not suitable for supporting life-sustaining medical devices.

MANA 10.24-D has built-in BMS (Battery Management System), which can manage and monitor cells information including voltage, current and temperature. Besides that, BMS can balance cells charging to extend cycle life. BMS has protection functions including over-discharge, over-charge, over-current and high / low temperature; the system can automatically manage the charge state, discharge state, and balance state.

Multiple MANA 10.24-D can be connected in parallel to expand capacity and power, and 15 MANA 10.24-D can be connected in parallel at most.

2.2 Interface Introduction

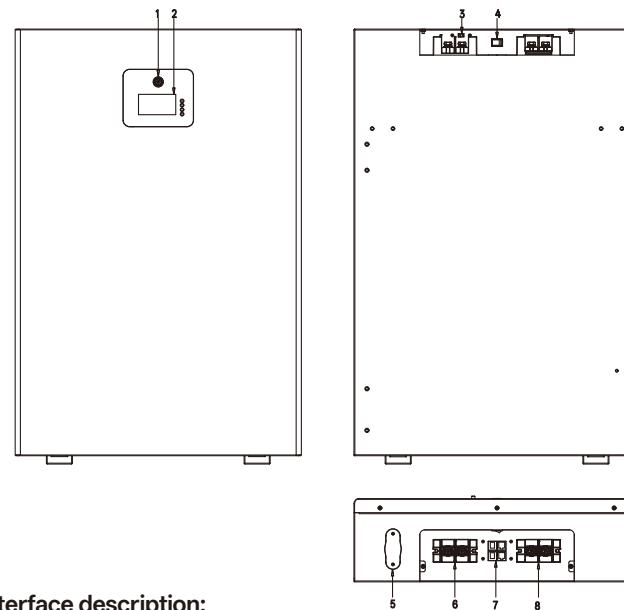

Operation interface description:

Serial Number	Name	Description
1	ON/OFF button	Start-up switch
2	LCD display	Display battery information
3	Slide switch	BMS power supply switch
4	Rocker switch	BMS switch
5	WiFi interface	Port for WiFi
6	Positive terminal	Total positive terminal
7	Communication port	Communication interface
8	Negative terminal	Total negative terminal

2.2.1 Switch ON / OFF

1. Turn on battery:

For single MANA 10.24-D, switch on the red rocker switch first. Press the silver ON/OFF button the button will blinking in blue and red led during start up. LCD display will be on and display the "Welcome" page. When battery starts up successfully without error, the silver ON/OFF button will blink in blue led.

For multiple MANA 10.24-D in parallel, switch on the red rocker switch of all batteries first. Just press the silver ON/OFF button of MASTER battery, MASTER battery will turn on all the slave batteries via parallel communication cable automatically. LCD display will be on and display the "Welcome" page. When battery starts up successfully without error, the silver ON/OFF button will blink in blue led, then parallel battery system will operate normally.

2. Turn off:

For single MANA 10.24-D, hold pressing the silver on/off button for 3-5s, the silver ON/OFF button will blink in blue led, then release silver ON/OFF button, battery and LCD will be off automatically after 1min standby. Then switch off the red rocker switch.

For multiple MANA 10.24-D in parallel, just hold pressing the silver ON/OFF button of MASTER battery for 3-5s, MASTER battery will turn off all the slave batteries automatically after 1min standby. Then switch off all red rocker switch of all batteries.

2.2.2 CAN / RS485 Port

CAN / RS485 Communication Terminal (RJ45 port), connect to inverter, follow CAN / RS485 protocol.

PIN	Definition
Pin 1, Pin 8	RS485-B (to Inverter, reserved)
Pin 2, Pin 7	RS485-A (to Inverter, reserved)
Pin 3	NC
Pin 4	CANH (to Inverter)
Pin 5	CANL (to Inverter)
Pin 6	GND

2.2.3 RS232 Port



RS232 Communication Terminal (RJ45 port) follow RS232 protocol, for manufacturer or professional engineer to debug or service.

PIN	Definition
Pin 1, Pin 8	GND
Pin 2, Pin 7	RS232_TX
Pin 3, Pin 6	RS232_RX
Pin 4, Pin 5	NC

2.2.4 Function Description Of The LCD Display

Main menu page

After power on / sleep activation, the welcome screen will be displayed, press MENU key to enter the main menu Page. As shown below:

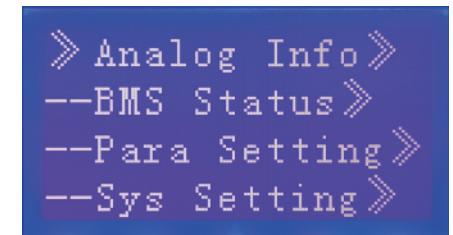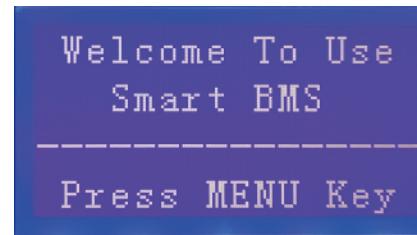

Key Description

- 1) SW1----MENU, SW2---ENTER, SW3----DOWN, SW4-----ESC.
- 2) Each item begins with "»" or "--", where "»" represents the current cursor position, press the DOWN key to move the cursor position downwards; Items ending with "»", indicates that the item has content that is not shown, press the ENTER key to enter the corresponding page.
- 3) Press the ESC key to return to the previous directory; from any location, press the MENU key to return to the main menu page.
- 4) In the dormant state, press any button to activate the display.

Sleep mode

Under normal operating conditions, the system will enter sleep mode after one minute of no key operation.

In the sleep mode state, the display will activate when any button is pressed.


2.2.5 Function Description Of The ON/OFF Button

Protect: Blinking in red led.

Fault: Red led ON.

03 INSTALLATION GUIDE

Installation flow chart

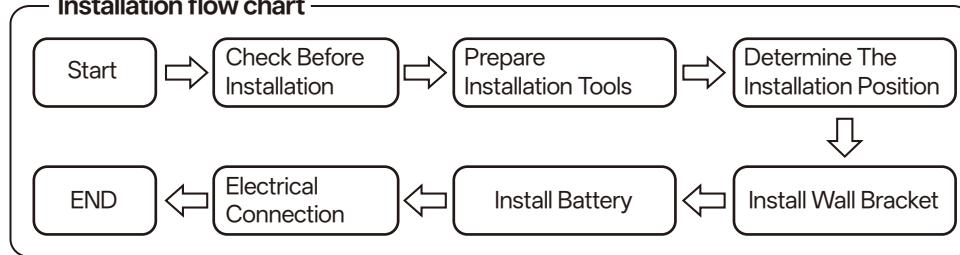

3.1 Checking Before Installation


3.1.1 Checking Outer Packing Materials

Packing materials and components may be damaged during transportation. Therefore, check the outer packing materials before installing the battery. Check the surface of packing materials for damage, such as holes and cracks. If any damage is found, do not unpack the battery and contact the dealer as soon as possible. You are advised to remove the packing materials within 24 hours before installing the battery.

3.1.2 Checking Deliverables

After unpacking the battery, check whether deliverables are intact and complete. If any damage is found or any component is missed, contact the dealer.

The below table shows the components and mechanical parts that should be delivered.

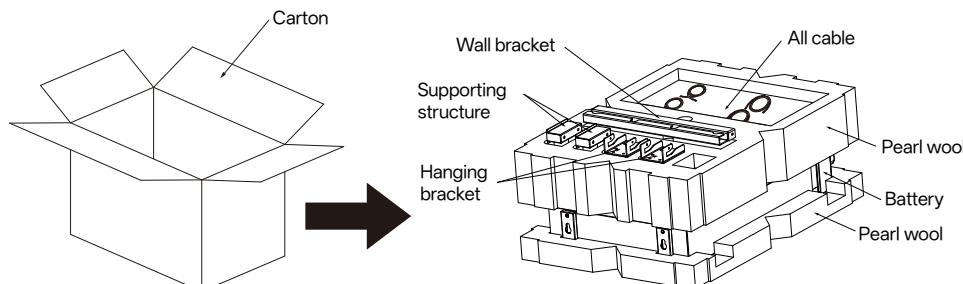

NO.	Pictures	Quantity	Description
1		1PCS	Battery
2		1PCS	Wall bracket
3		2PCS	Hanging bracket
4		2PCS	Supporting structure
5		4PCS	M10*60
6		12PCS	M6*16
7		2PCS	M4*20
8		1PCS	Test report
9		1PCS	QA certificate
10		1PCS	Power Cable 1
11		1PCS	Power Cable 2
12		1PCS	PE Cable
13		1PCS	Communication Cable
14		1PCS	Parallel Communication Cable

3.2 Tools

Model	Tools		
Installation	Knife	Measuring tape	Socket wrench (10 / 16mm)
			
Protection	Rubber mallet	Cross screwdriver	Hammer drill (68mm)
			
Protection	ESD gloves	Safety goggles	Anti-dust respirator
			
Protection	Safety shoes		
			

3.3 Installation Requirements

3.3.1 Installation Environment Requirements


- Install the battery in the indoor environment.
- Place the battery in a secure location away from children and animals.
- Do not place the battery near any heat sources and avoid sparks.
- Do not expose the battery to moisture or liquids.
- Do not expose the battery to direct sunlight.

3.3.2 Installation Carrier Requirements


- Only mount batteries on fire-resistant buildings. Do not install batteries on flammable buildings.
- Due to the quite heavy battery, make sure the wall / ground can meet the load bearing requirements.

3.4 Installation Instructions

3.4.1 Dimensions

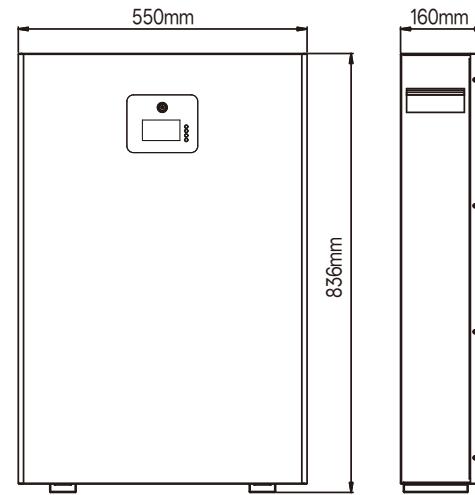


Minimum mounting distance between battery pack and equipment:

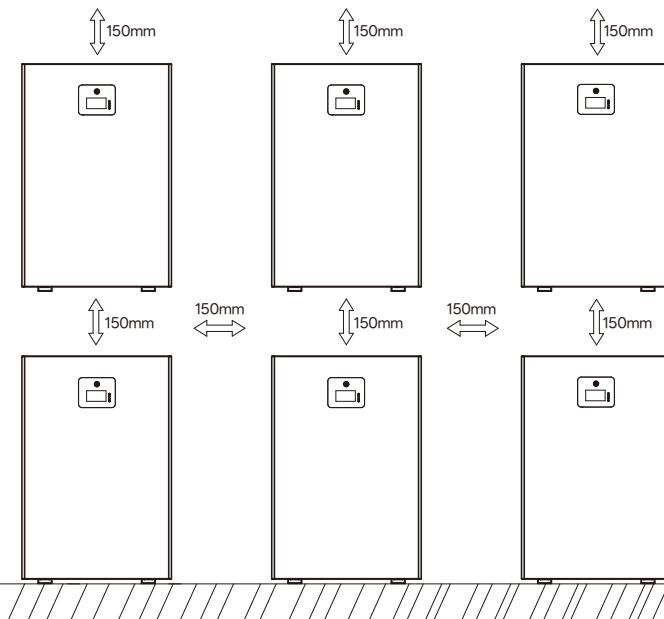

3.4.2 Installation Procedure


STEP 1

Drill the hole with an 12mm drill bit as follows and fix the wall bracket to the wall.

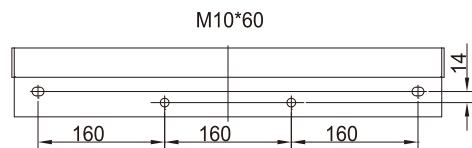


STEP 2

Install the hanging bracket and support plate.

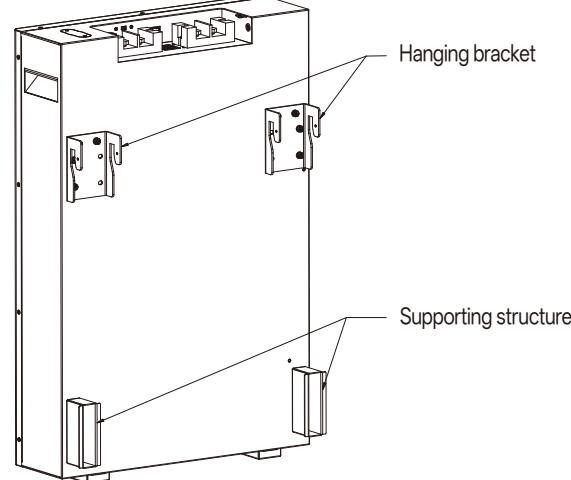


STEP 3

Hang MANA 10.24-D on the wall bracket and tighten it.

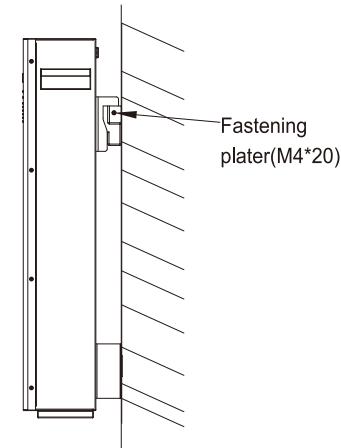


STEP 4

Connect to ground.

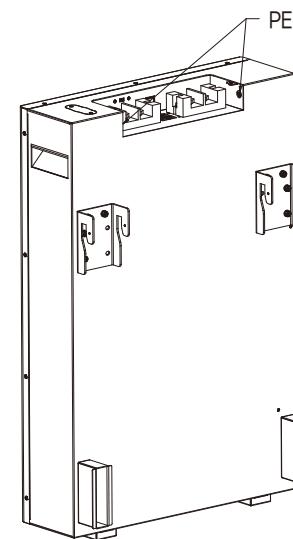


STEP 5


Connect power cable.

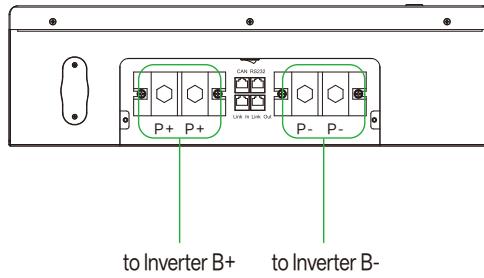**STEP 6**

Connect communication cable.

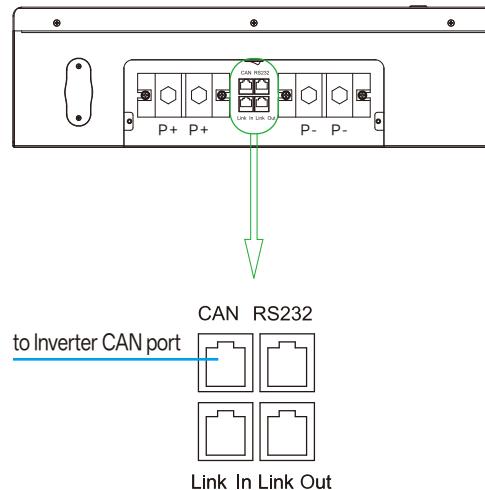**STEP 7**

When multiple batteries are connected in parallel, follow the following wiring mode, then install a Wi-Fi stick on the host.

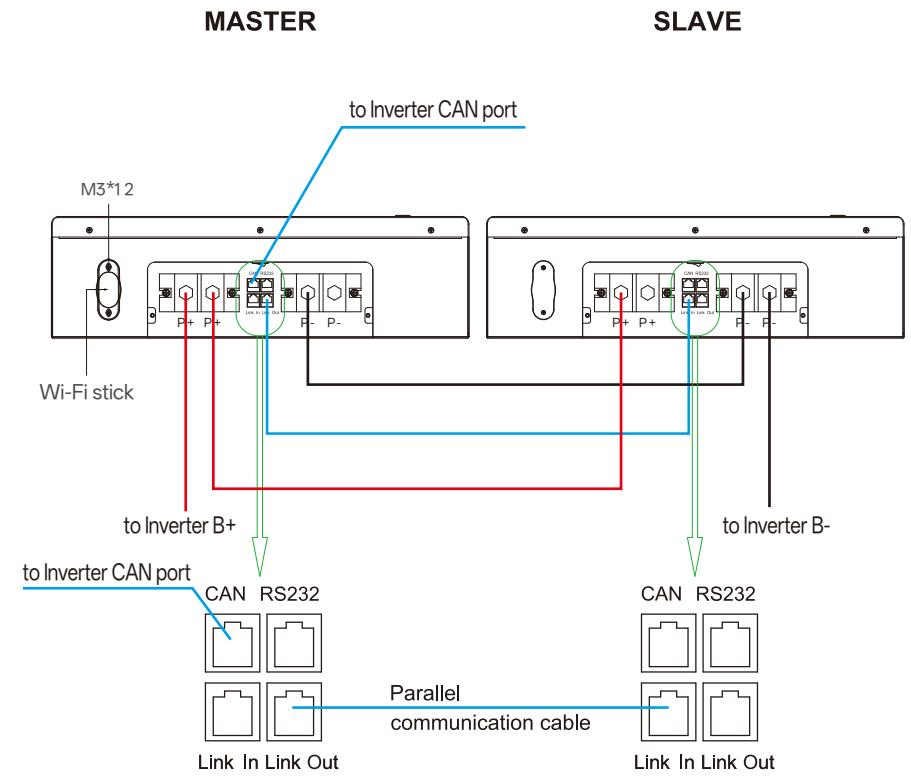

04 MAINTENANCE

4.1 Recharge Requirements During Normal Storage

Battery should be stored in an environment with temperature range between -10°C ~ +45°C, and maintained regularly according to the follow table with 0.5C (50A) current till 40% SOC after a long storage time.

Recharge Conditions When In Storage

Storage Environment Temperature	Relative Humidity of Storage Environment	Storage Time	SOC
Below -10°C	/	Prohibit	/
-10~25°C	5%~70%	≤12 months	30%≤SOC≤60%
25~35°C	5%~70%	≤6 months	30%≤SOC≤60%
35~45°C	5%~70%	≤3 months	30%≤SOC≤60%
Above 45°C	/	Prohibit	/

4.2 Recharge Requirements When Over Discharged

The over-discharged (90% DOD) battery should be recharged according to the following table, otherwise the over-discharged battery will be damaged.

Recharge conditions when battery is over discharged

Storage Environment Temperature	Storage Time	Note
-10~25°C	≤15 days	Battery Pack disconnected from Inverter
25~35°C	≤7 days	
-10~45°C	<12 hours	Battery Pack connected to Inverter

05 DISPOSAL OF THE BATTERY SYSTEM

Disposal of the battery must comply with the local applicable disposal regulations for electronic waste and used batteries.

- Do not dispose of the battery system with your household waste.
- Avoid exposing the batteries to high temperatures or direct sunlight.
- Avoid exposing the batteries to high humidity or corrosive atmospheres.